



OVER 40 YEARS OF INNOVATION, QUALITY, SAFETY.

Step Release/Lowering lever hinge tension adjustment

Due to shipping if for any reason the auto return spring tension of the release lever is binding or is not operating adequately, it can easily be adjusted using one 9/16 wrench and one 7/32 Allen wrench. The bolt is located at the back of the GlowStep Revolution cage directly in front of the tensions spring as seen in the photos below. Adjust the 9/16 nut one 1/4 turn at a time and recheck tension of the release lever so that it automatically drops back into the down or locked position when released.

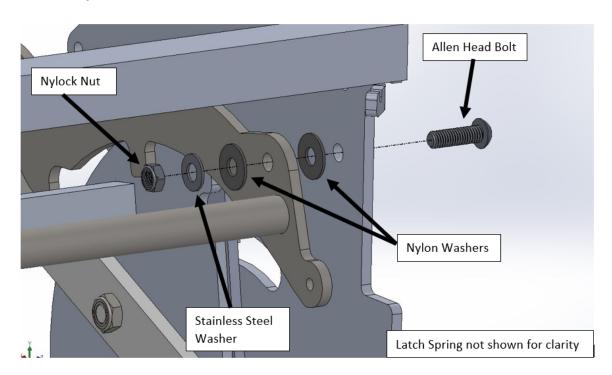

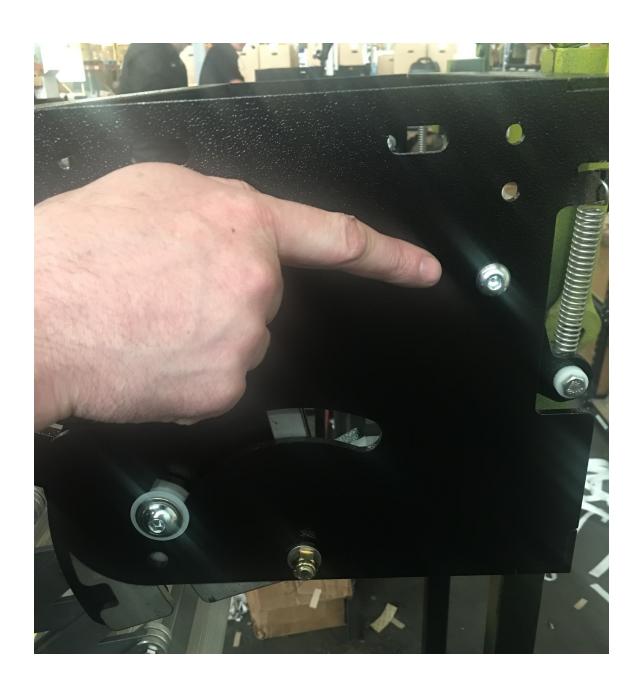

P: 1.800.246.8132 F: 253.854.8003 1901 Fryar Ave. Sumner WA 98390